



# Reloop Flux Quick-Start Guide

# Setup

## Serato software

The Reelock Flux is a “Serato DJ Pro hardware unlocked” device, meaning it works with Serato DJ Pro out of the box.

It is also a “Serato DVS hardware unlocked device”, meaning it unlocks Serato DVS when connected, allowing you to use turntables, media players or CD players to control Serato DJ Pro using NoiseMap™ Control Tone.

Please ensure you have the latest version of Serato DJ Pro installed:

[Click here to download Serato DJ Pro](#)

## Drivers & firmware

The Reelock Flux is class compliant on macOS, meaning it does not require manufacturer drivers to connect to Serato DJ Pro. Manufacturer specific drivers are required when using the Reelock Flux with Windows operating systems and Serato DJ Pro, however.

Regardless of your operating system, download and install the latest version of Serato DJ Pro, then connect your Reelock Flux with a USB cable to your computer, and launch Serato DJ Pro. If using Windows, when prompted, click the **Install Driver** pop-up.

It's strongly recommend that you update to and install the latest firmware available for the Reelock Flux. You can download the latest driver & firmware directly from [Reelock's website](#).

## Connection

Steps below are provided for a basic configuration using Serato DJ Pro. For more detailed connection configurations, please refer to the Reelock user manual:

1. If using DVS, connect your turntables, CD players, or media players loaded with Serato NoiseMap™ Control Tone, to the Deck 1, 2, and 3 inputs on the Reelock Flux, ensuring the SOURCE DECK PHONO/LINE dip switches are toggled correctly. If using CD or media players with HID or INT mode, simply connect them to your PC via USB, or connect them to the USB Hub ports on the Reelock Flux.
2. Connect the corresponding Deck 1, 2 and 3 outputs on the Reelock Flux via RCA, to the corresponding or desired line-level channel inputs on your mixer.
3. Connect the (PC) USB-C PD connection on the Reelock Flux to a spare USB port on your PC, using either USB-C to USB-A cable or the USB-C to USB-C cable.  
**(Optional, but recommended)** Connect an external power supply (USB-C adapter is advisable for the most reliable power supply) to the USB-C DC IN connection on the Reelock Flux.
4. Launch Serato DJ Pro, and choose ABS (absolute) or REL (relative) virtual deck play modes if using Serato DVS, or INT (internal), if using HID mode.

# Setup

## Recording


To record your mix using Serato DJ Pro, you can use one of the three inputs. In the steps below, we use the DECK 3/AUX input on the Reelap Flux:

1. Connect the Reelap Flux as per the Connection steps above, leaving the DECK3/AUX input spare.
2. Connect an RCA cable from a spare output on your mixer, usually labelled BOOTH, MASTER 2 or REC OUT, to the DECK3/AUX input on the Reelap Flux ensuring it's SOURCE DECK PHONO/LINE dip switch is set to LINE.
3. Open Serato DJ Pro, and click the REC button to open the Recording panel, then choose CHANNEL 3 (AUX) / MIX, set your Record input level and press the REC button in the Recording panel to start recording.


## Software Through mode

The Reelap Flux also has a Software Through mode option, which allows the user to select an additional virtual deck play mode, entitled THR (Through). This overrides & disables the hardware Thru button controls, and allows the user to play analog signal in Serato DJ Pro, that can also utilize Serato DJ software FX.

Enable this via **Setup > Mixer > General > Show software Through Mode option:**

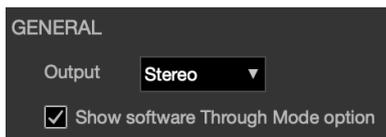


## Overview

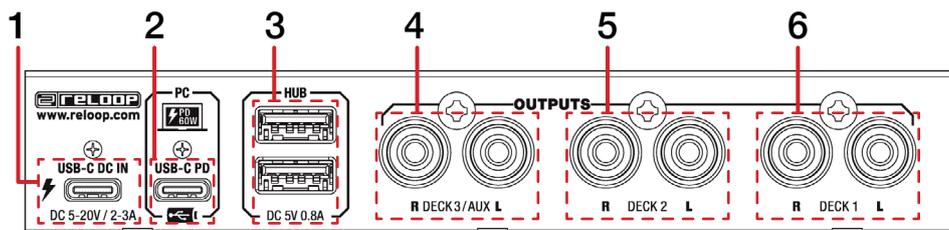


#	RELOOP FLUX CONTROL	FUNCTION
1	USB-C DC IN	Connect compliant external USB power supply
2	PC	Connect USB cable to PC. Supply power to Flux using PC's USB port (if no external power supply is connected to USB-C DC IN port). If connected PC has compliant USB-C port, Flux external power supply (USB-C DC IN) can also power PC
3	HUB	Connect USB accessories
4	OUTPUTS (R - DECK 3/AUX - L)	Connect Flux RCA output to mixer channel input, or other device with line-level input
5	OUTPUTS (R - DECK 2 - L)	Connect Flux RCA output to mixer channel input, or other device with line-level input
6	OUTPUTS (R - DECK 1 - L)	Connect Flux RCA output to mixer channel input, or other device with line-level input

# Overview

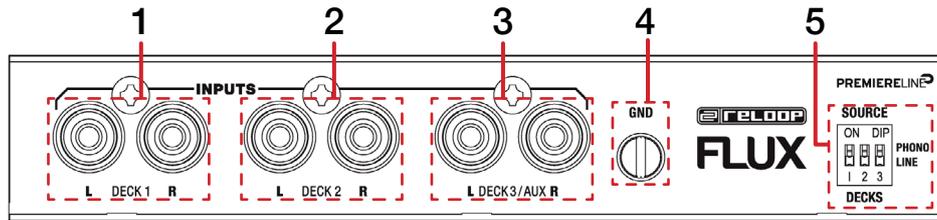

#	RELOOP FLUX CONTROL	FUNCTION
1	INPUTS (R - DECK 1 - L)	Connect RCA phono or line-level output device to Flux input
2	INPUTS (R - DECK 2 - L)	Connect RCA phono or line-level output device to Flux input
3	INPUTS (R - DECK 3/AUX - L)	Connect RCA phono or line-level output device to Flux input
4	GND	Connect grounding post for turntables
5	SOURCE 1/2/3 DECKS (PHONO/LINE)	Toggle phono/line for channel inputs 1, 2, or 3, for phono (turntables) or line-level (CD, media player, or turntables) devices

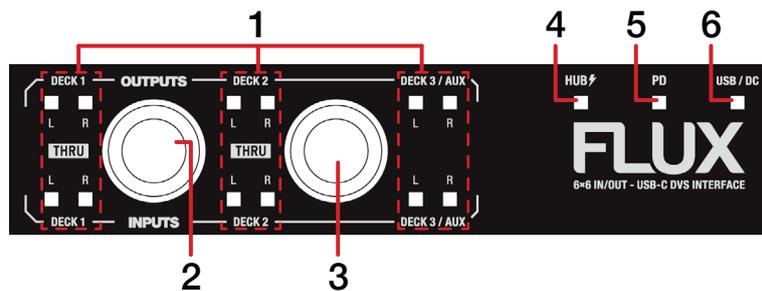

#	RELOOP FLUX CONTROL	FUNCTION
1	DECK 1 - THRU - DECK 1 DECK 2 - THRU - DECK 2 DECK 3/AUX - DECK 3/AUX	<p><b>OUTPUT LEFT &amp; RIGHT LED:</b> OFF when less than -24 dBV (LINE) of signal is output, FULLY LIT when more than +2 dBV (LINE) of signal is output, or FLASHING when more than +14 dBV (LINE) of signal is output (may indicate clipping) per deck</p> <p><b>THRU LED (DECK 1):</b> FULLY LIT when THRU is enabled</p> <p><b>THRU LED (DECK 2):</b> FULLY LIT when THRU is enabled</p> <p><b>INPUT LEFT &amp; RIGHT LED:</b> OFF when less than -28 dBV (LINE) / -60 dBV (PHONO) of signal is input, FULLY LIT when more than -2 dBV (LINE) / -34 dBV (PHONO) of signal is input, or FLASHING when more than +10 dBV (LINE) / -22 dBV (PHONO) of signal is input (may indicate clipping) per deck</p>
2	THRU BUTTON (DECK 1)	Toggle Deck 1 THRU on or off (signal bypasses connected PC and passes directly from input to output)
3	THRU BUTTON (DECK 2)	Toggle Deck 2 THRU on or off (signal bypasses connected PC and passes directly from input to output)
4	HUB	LED: OFF when Flux is connected via USB-C to PC port using USB-C to USB-A cable, DIMMED when USB-A external power supply is connected (USB HUB delivers less than 0.8A to connected accessories), and FULLY LIT indicates USB-C PC or USB-C external power supply is connected (USB HUB should deliver full 0.8A to connected accessories)
5	PD	FULLY LIT when USB-C PD compliant PC is connected
6	USB/DC	LED: FLASHING ON POWER-UP indicates power for USB HUB and connected accessories is insufficient, DIMMED indicates USB-A PC or USB-A external power supply is connected (USB HUB may not deliver sufficient power to connected accessories), and FULLY LIT indicates USB-C PC or USB-C external power supply is connected (USB HUB should deliver full available power to connected accessories)

# Help

## Show Tooltips

Click on the **Help** button in the upper right-hand corner of Serato DJ Pro, then **Show tooltips** to enable tooltips. Tool tips provide a handy way to learn the various features of Serato DJ Pro.

Move the mouse over a section of the screen to bring up a context sensitive tool tip.

## Watch Tutorials

Click on the **Help** button in the upper right-hand corner of Serato DJ Pro, then **Watch tutorials** to launch your default internet browser and watch tutorials, to help you get familiar with Serato DJ Pro.

## Get Support

Click on the **Help** button in the upper right-hand corner of Serato DJ Pro, then **Get support** to launch your default internet browser and navigate to the Serato DJ Pro knowledge base, where you can find helpful articles and guides on Serato DJ Pro. Alternatively, type in the  **Go** box, with keywords, to search the Serato DJ Pro knowledge base for specific, related topics.